
APPARATUS

INSTALL AND PRODUCT GUIDE

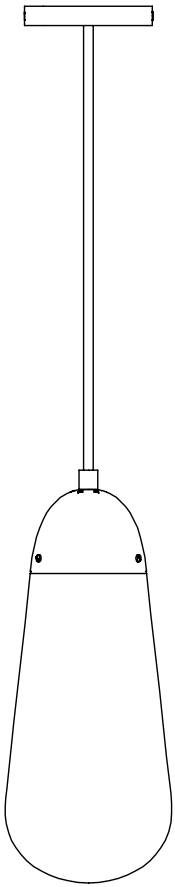

LARIAT®: PENDANT LARGE

SAFETY

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

TURN OFF ELECTRICAL POWER PRIOR TO INSTALLATION.

SUITABLE FOR DRY, INDOOR USE ONLY.

INSTALLATION WILL REQUIRE TWO OR MORE PEOPLE.

CONTENT

☐ A. FIXTURE BODY
1 QTY



☐ B. CROSSBAR
1 QTY




☐ C. FINISHED FIXTURE SCREWS
2 QTY



☐ D. STEEL SCREWS
2 QTY




☐ E. WIRE CONNECTORS
3 QTY



☐ F. PAIR OF GLOVES
2 QTY




☐ G. BULBS
1 QTY




☐ 120V
☐ 220V


☐ H. GLASS
1 QTY




☐ I. TOPPER SCREWS
3 QTY



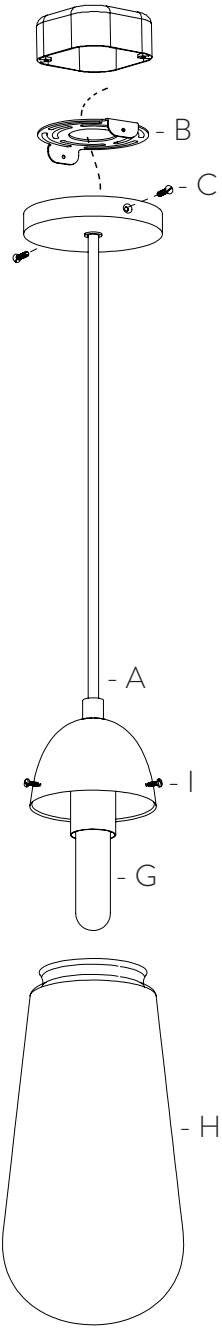

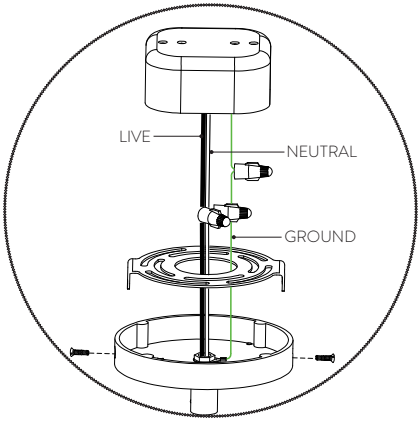

120V WIRING DIAGRAM

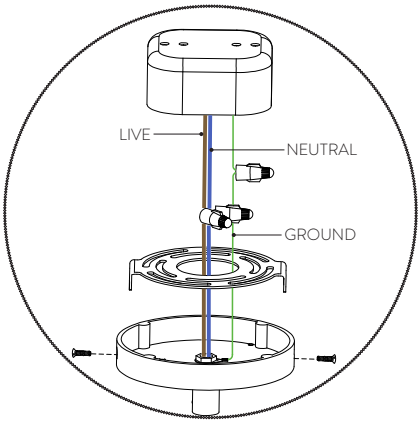

240V WIRING DIAGRAM

INSTALLATION

UNPACK AND UNWRAP FIXTURE WITH CARE. LAY FIXTURE ON A FLAT, NON ABRASIVE SURFACE, PREFERABLY ON DROP CLOTH OR OTHER SOFT MATERIAL. WEAR GLOVES (F) TO AVOID DAMAGING PATINA.

1. Unless instructed, do not rotate the fixture during assembly or after it is fully installed. This will compromise the stability and safety of the fixture. Carefully remove fabric covering from brass mesh, by gently pulling off. Do not cut, as brass mesh may get damaged.

2. Remove crossbar (B) from fixture. Do not discard finished fixture screws (C). Attach crossbar (B) to junction box using steel screws (D).

2. Straighten brass mesh by pulling gently. Mesh should be taught, with no slack. Connect leads from fixture to the ceiling leads. Once the wires are connected, use finished fixture screws (C) to attach fixture to the installed crossbar (B).


3. Install provided bulb (G). Slide glass (H), over bulb (G) and into the metal shade. Tighten screws and ensure they are securely gripping the rubber collar on glass. Do not over-tighten as it may break or damage the shade.

Note:
Brass mesh is delicate and can be crushed easily. Do not place any pressure on brass chain while installing.

PRODUCT CARE

BRASS: AGED BRASS, OIL-RUBBED BRONZE AND BLACKENED BRASS PATINAS ARE UNLACQUERED AND SEALED WITH A LIGHT LAYER OF WAX. TARNISHED SILVER PATINAS ARE LACQUERED. GENTLY DUST WITH A DUSTER OR SOFT CLOTH. DO NOT USE BRASS CLEANERS AS THEY WILL REMOVE THE PATINA.

GLASS: FOR CLEAR GLASS, WIPE GENTLY WITH A MILD GLASS CLEANER. FOR FROSTED OR ETCHED GLASS, GENTLY DUST WITH A DUSTER OR SOFT CLOTH. DO NOT SCRUB FROSTED GLASS ORBS OR PLACE ANY GLASS COMPONENTS IN THE DISHWASHER.

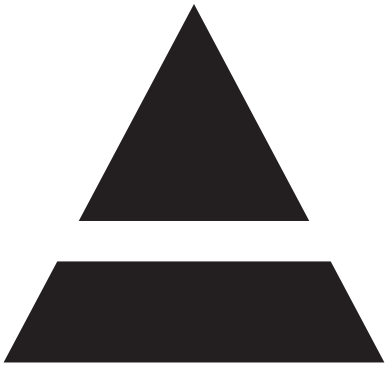

WWW.APPARATUSSTUDIO.COM

© 2014, APPARATUS LLC
PATENT NO. D757, 328.
WWW.APPARATUSSTUDIO.COM/PATENTS